



VOLUMIZING HOT ROLLERS LUXE

User Guide

Hot roller set with dual temperature control
Model No. 73708, 73709, 73710, 73711, 73718, 73719

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING

When using electrical appliances, especially when children are present, basic safety precautions should always be followed, including the following:



DANGER

KEEP AWAY FROM WATER

Electricity and water are a dangerous combination and can cause death by electric shock. Do not allow electrical cords to come into contact with water or other liquids.

ELECTRICAL APPLIANCES ARE ELECTRICALLY LIVE WHEN PLUGGED IN, EVEN IF TURNED OFF.

To reduce the risk of death by electric shock:

1. Always unplug the appliance immediately after using.
2. Do not use while bathing.
3. Do not place or store the appliance where it can fall or be pulled into a bath tub or sink.
4. Do not place in or drop into water or other liquid.
5. If the appliance falls into water, unplug it immediately. Do not reach into the water.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of burns, electrocution, fire or injury to persons:

1. Make sure to remove the plug from the wall outlet after use.
2. Never leave the appliance unattended when it is plugged in.
3. Do not use if the plug is loose in the outlet as there may be a risk of fire, electric shock, electrical shortage, and burning.
4. This appliance is not intended for use by person (including children) with reduce physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been give supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped, damaged, or dropped into water. Return the appliance to a service center for examination and repair.
7. Keep the cord away from heated surfaces. Do not wrap the cord around the appliance.
8. Do not use an extension cord with this appliance.
9. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
10. Never use while sleeping.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

11. Never drop or insert any object into any opening.
12. Use this appliance only for its intended use as described in this manual.
13. Do not use attachments not recommended by the manufacturer.
14. Household Use Only. Close supervision is necessary when this appliance is used by, on, or near children or individuals with certain disabilities.
15. Do not touch the roller sockets. They are hot.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. Rollers from the original Voluminous Hot Rollers (Model No. 73701, 73702, 73703, 73704, 73705, 73706, 73707) are not compatible with the Volumizing Hot Rollers Luxe base.



Do not use the appliance near a bath tub, washbasin or other vessel filled with water. Never place the appliance in water or any other liquid.

SAVE THESE INSTRUCTIONS

MAINTENANCE INSTRUCTIONS

VOLUMIZING HOT ROLLERS LUXE

1. Your appliance is virtually maintenance free. It contains no user serviceable parts, and no lubrication is needed.
2. Keep heated surfaces clean and free of dust, dirt & hairspray.
3. If cleaning becomes necessary, disconnect the appliance from the power source and let it cool. Wipe the exterior with a damp cloth.
4. If any malfunction occurs, unplug the appliance, allow it to cool and return it to a service center to repair.
5. Never wrap the cord around the appliance since this will cause the cord to wear prematurely and break. If the cord becomes twisted, untwist it prior to use.
6. Handle the cord carefully for longer life and do not put any stress on the cord where it enters the handle. Avoid jerking, twisting or straining especially at the plug connections. It could cause the cord to fray and possibly break.
7. When not in use, your hot rollers should be disconnected and stored in a safe, dry location, out of the reach of children. Do not wrap the cord around the hot rollers set.
8. Do not attempt to repair the appliance yourself.

OPERATING INSTRUCTIONS

VOLUMIZING HOT ROLLERS LUXE

This appliance is intended for household use.

Use on Alternating Current (50/60 Hz).

This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



WARNING

Do not touch the roller sockets that hold the rollers or the roller surfaces. They are hot.



OPERATING INSTRUCTIONS

VOLUMIZING HOT ROLLERS LUXE

AUTO SHUT-OFF

After approximately 90 minutes, the unit will automatically shut itself off. To reactivate the unit, press the Power & Temperature Adjustment Button.



AUTO WORLD VOLTAGE

This appliance contains a special electronic circuit that automatically converts it for worldwide usage from 120V, 60Hz to 240V, 50Hz. Just plug it into the local power outlet and use it as normal; the styler will automatically adjust to the local current. You may need an adapter to allow the plug to fit into the local outlets.

Note: Tool heat up time may vary based on country and voltage.

OPERATING INSTRUCTIONS

VOLUMIZING HOT ROLLERS LUXE

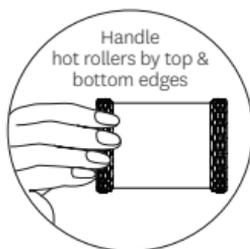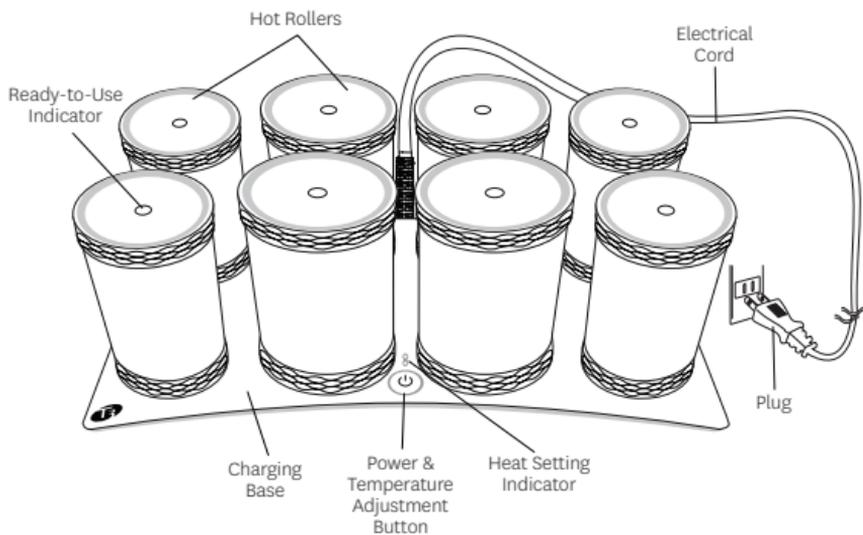

BEFORE YOU START

VOLUMIZING HOT ROLLERS LUXE

CHOOSE A STYLE

Determine whether you want bouncy, voluminous waves or loose, textured waves and follow the appropriate steps to achieve the look.

PREP YOUR HAIR

Apply the appropriate styling products for your hair type and desired results. For example, root lift spray, texturizing powder and volumizing mousse can help create more volume.

SECTION YOUR HAIR


Always start with dry, detangled hair, divided into 1-2" wide sections. For best results, follow the natural part of your hair when sectioning.

SELECT THE RIGHT ROLLER SIZE


Use the smaller diameter rollers for shorter sections of hair and larger diameter rollers for longer sections. 1.5 revolutions around the roller creates a C curve while 3 or more revolutions creates a curl or wave.

HOW TO USE YOUR VOLUMIZING HOT ROLLERS LUXE

- 1 Press the Power & Temperature Adjustment Button to turn the hot rollers on. The rollers are set to heat up to the high heat setting upon first use, indicated by 2 solid lights.

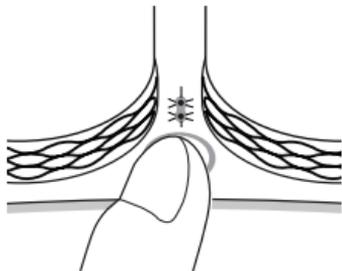

- 2 To change the temperature to the Low heat setting, press the Power & Temperature Adjustment Button until the lights blink to indicate the temperature adjustment mode. Click again to select the low heat setting, indicated by 1 light. Release the button and allow the blinking light to turn solid.

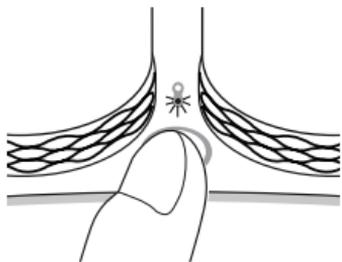

Note: Each time you turn on the hot rollers, it will heat up to your last set temperature.

HOW TO USE YOUR VOLUMIZING HOT ROLLERS LUXE

- 3 When the Ready-to-Use indicators appear, the rollers are ready to use.



- 4 Working from ends to roots, roll each 1-2" sections of hair around a roller. Secure the clip by placing the longer teeth beneath the roller for a more secure hold. Allow the rollers to set for 10-20 minutes before removing them.



Expert Tip: To maximize hold, ensure the hair sections are appropriate for the selected roller size. Sectioning will vary based on length and thickness of hair.

TIPS FOR VOLUMINOUS WAVES

VOLUMIZING HOT ROLLERS LUXE


- 1 To create volume at the roots, pull the section in the opposite direction of hair growth before wrapping it firmly around the roller.



- 2 To preserve the volume, gently unroll the hair in the reverse direction when you take the roller out and place the section down carefully to cool.



- 3 Rake fingers through hair to retain volume or brush gently with a paddle brush to create a softer finish.

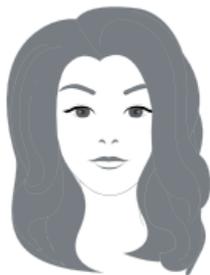

TIPS FOR BEACHY WAVES

VOLUMIZING HOT ROLLERS LUXE


- 1 For a beachy look, roll the side sections away from the face and clip them at an angle.



- 2 Remove the rollers using a spiraling motion. This will create a more textured, relaxed effect.



- 3 Allow all sections to cool, then finger comb waves to achieve desired finish.

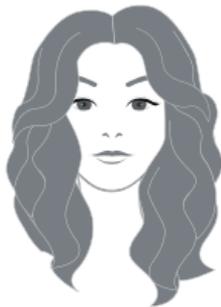

T3 LIMITED WARRANTY TERMS & CONDITIONS

T3 Micro will repair or replace (at our option) T3 products for twenty-four (24) months from the date of purchase if they are defective in workmanship or materials. This limited warranty does not cover (1) damage due to misuse or abuse, such as incorrect voltage supply, dropping, or failure to follow enclosed instructions or (2) tampering, such as repair or attempt to repair. To obtain service under this warranty, please visit t3micro.com/warrantyclaim to submit a warranty claim, or call us at (866) 376-8880 to receive detailed instructions. You will be required to provide proof of purchase.

THIS LIMITED WARRANTY IS ONLY VALID IF THE PRODUCT IS PURCHASED FROM AN AUTHORIZED SELLER OF T3 GOODS AND IF THE ORIGINAL SERIAL NUMBER ON THE PRODUCT HAS NOT BEEN REMOVED OR OTHERWISE TAMPERED WITH.

Any implied warranties, obligations, or liabilities, including but not limited to the implied warranty of merchantability and fitness for a particular purpose, shall be limited in duration to the 24 month duration of this written limited warranty. Some states do not allow a limitation on how long an implied warranty lasts, so the above limitation may not apply to you.

IN NO EVENT SHALL T3 BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED.

Visit www.t3micro.com/register to complete your warranty registration.

MODEL NO./SPECIFICATIONS/RATINGS

73708, 73709

Roller Size: 1.5" x 4pcs, 1.75" x 4pcs
120V~60Hz, 214 W (AT 1 MIN) / 59W (at steady)
240V~50Hz, 224W (AT 1 MIN) / 69W (at steady)

73710

Roller Size: 1" x 8pcs
120V~60Hz, 120W (AT 1 MIN) / 54W (at steady)
240V~50Hz, 134W (AT 1 MIN) / 59W (at steady)

73711

Roller size: 1.25" x 8pcs
120V~60Hz, 146W (AT 1 MIN) / 61W (at steady)
240V~50Hz, 163W (AT 1 MIN) / 66W (at steady)

73718

Roller Size: 1.50" x 8pcs
120V~60Hz 207W, 240V~50Hz, 219W (at 1 min)
120V~60Hz 57W, 240V~50Hz, 67W (at steady)

73719

Roller size: 1.75" x 8pcs
120V~60Hz 218W, 240V~50Hz, 231W (at 1 min)
120V~60Hz 63W, 240V~50Hz, 74W (at steady)

T3 Micro, Inc.
Venice, CA USA
Made in China



WARNING

Do not use the appliance near a bath tub, washbasin or other vessel filled with water. Never place the appliance in water or any other liquid.

